



Installation Guide
Imperboard Tanking Kit



tile backing | waterproofing | insulation


Imperboard

Installation Guide Imperboard Tanking Kit

Imperboard Tanking Membrane is a styrene butadiene latex based liquid applied membrane that offers a simple waterproofing method for absorbent substrates in wet areas.


Designed for use before laying ceramic, porcelain, natural stone and mosaic tiles.

Step 1 -

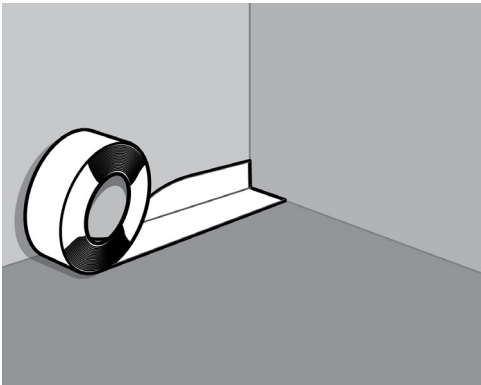

- Ensure the application area is clean and dry.
- Tape all corners with Imperboard Tape.
- Overlap the tape in the corners.

Step 2 -

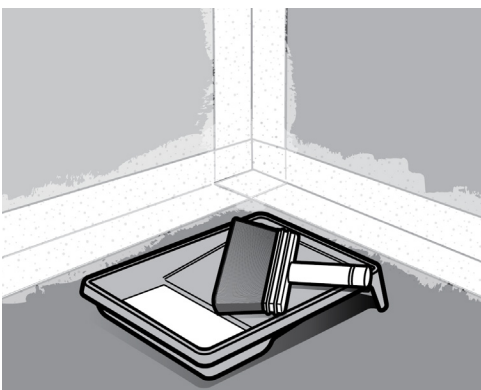

- Apply a coat of Imperboard Tanking Membrane to cover the tape.
- If required apply a second coat after one hour.
- Allow to dry for two to four hours (depending on room temperature) before tiling.